

# Instruction Guide

Speedtech Performance Spindle  
67-81 F-Body, 68-74 X-Body, 64-72 A-Body, 77-87 G-Body



***Speedtech***  
**PERFORMANCE**

CHASSIS - SUSPENSION - PRO TOURING - AUTOCROSS - DRAG RACING - CUSTOM BUILDS

435.628.4300 [SPEEDTECHPERFORMANCE.COM](http://SPEEDTECHPERFORMANCE.COM)    

4160 S. RIVER RD, ST. GEORGE, UT 84790



*Figure 1: 1956 Bel Air features our ExtReme spindles [photo by Kyle Phillips]*

Congratulations on the purchase of your new Speedtech Performance spindles. Use only approved and appropriately rated jack and jack stands, and be sure to take all safety precautions required to complete the job safely and correctly. If you have uncertainties, seek the assistance of a highly qualified workshop to assist you.

Read and understand all instructions thoroughly before you begin. Your main assembly and set up of your new spindles can be done in a home garage with hand tools.

Speedtech enjoys seeing the progress our customers are making as they work through their builds. Join the group, [Team Speedtech](#), on Facebook and share your pictures and your story.

Speedtech Performance sends you best wishes for your project!

# TABLE OF CONTENTS

<b>1.0</b>	<b>GENERAL INFORMATION.....</b>	<b>5</b>
1.1	THIS GUIDE.....	5
1.2	OVERVIEW.....	5
1.3	TOOLS.....	5
<b>2.0</b>	<b>CHECK IN PARTS AND HARDWARE.....</b>	<b>6</b>
2.1	CHECKING IN THE ORDER.....	6
2.2	CHECK IN TABLE.....	6
<b>3.0</b>	<b>GETTING STARTED.....</b>	<b>6</b>
3.1	LEVELING AND SUPPORT.....	6
<b>4.0</b>	<b>FACTORY DISASSEMBLY.....</b>	<b>7</b>
4.1	STEERING ARM REMOVAL.....	7
4.2	SPINDLE REMOVAL.....	7
<b>5.0</b>	<b>INSTALLATION.....</b>	<b>8</b>
5.1	SPINDLE INSTALLATION.....	8
5.2	SPINDLE TORQUE.....	8
<b>6.0</b>	<b>FACTORY STEERING ARMS.....</b>	<b>9</b>
<b>7.0</b>	<b>SPEEDTECH PERFORMANCE BILLET STEERING ARMS.....</b>	<b>10</b>
7.1	A AND G BODY.....	10
7.2	70-81 F-BODY.....	11
7.3	TIE RODS.....	11
<b>8.0</b>	<b>MAINTENANCE.....</b>	<b>11</b>

**9.0 ALIGNMENT.....12**

**10.0 CONGRATULATIONS.....13**

## 1.0 GENERAL INFORMATION

[Back to Table of Contents](#)

### 1.1 THIS GUIDE

Thank you for purchasing your new Speedtech Performance spindle. Read through all instructions thoroughly before beginning and take all safety precautions required to do the job carefully and correctly.

The following instructions are intended for professional installers and are guidelines only. Speedtech Performance assumes no responsibility for the installation of any of its products installed by others. All products are intended to be installed by qualified professionals.

While Speedtech's spindles work great as an upgrade for your factory suspension, it is also designed to meet the needs of those intending to participate in off highway road racing and autocross competition. To achieve maximum benefit from our system you should anticipate adjusting and tuning of the suspension to achieve optimum performance specific to the vehicle, driver, and type of racing. Some of this, such as tuning sway bars and shock settings, can be done track side through making adjustments and seeing/feeling how the car reacts to these changes. Speedtech recommends a tire probe pyrometer and good quality air pressure gauge be in your track side tuning kit.

**WARNING:** Once assembled you will need a professional wheel alignment performed. Driving a vehicle without a proper alignment can be dangerous, towing is recommended to transport the car prior to the alignment being performed.

### 1.2 OVERVIEW

These instructions outline the spindles. The system has been designed to work with a factory subframe or chassis.

Photos in the instruction process may vary slightly from your exact operation. For example, in this guide we have only used pictures of the spindles for the early Camaro. Your application may have a slightly different shape the part is functionally the same and is installed in the same manner described

### 1.3 TOOLS

Installation of the Speedtech Performance spindles can be done on the floor with a basic welder, cut off tool, and simple hand tools.

Additional things to have before you start:

- Wrench Set
- Torque Wrench
- Floor Stands
- Floor Jack

## 2.0 CHECK IN PARTS AND HARDWARE

[Back to Table of Contents](#)

### 2.1 CHECKING IN THE ORDER

Check in your order as soon as possible. To check in the order, Speedtech has provided a table which can be used as a check list, as displayed in figure 2. All bolts and nuts are NF unless otherwise noted. Hardware comes in several boxes. If you discover anything missing from your order, call your authorized dealer as soon as possible.

### 2.2 CHECK IN TABLE

X	#	Description	Size
	1	Drivers Side Spindle	Depends on Vehicle
	1	Passenger Side Spindle	Depends on Vehicle
	4	Steering Arm Mount Bolt	1/2" x 2 3/4" NF
	4	Steering Arm Mount Washer	1/2"

Figure 2: Check in table with the amounts, descriptions, and sizes

**NOTE:** Not included in this kit are caliper mounting bolts and washers. Since you will be using Corvette based brake kits, most aftermarket brake companies anticipate you would already have these parts and do not provide them with their brake kits. They can be purchased from several resources. Speedtech recommends GM part numbers 14084051 for the bolts and 10268875 for the washers. You will need four of each of them.

## 3.0 GETTING STARTED

[Back to Table of Contents](#)

### 3.1 LEVELING AND SUPPORT

**WARNING:** The vehicle should be on a level surface before you start.

Jack up and properly support the vehicle's frame. Remove the front wheels. For cars with drop off style rotors, reinstall one lug nut, if needed, to prevent the rotor from falling off.

## 4.0 FACTORY DISASSEMBLY

[Back to Table of Contents](#)

### 4.1 STEERING ARM REMOVAL

Back off the castle nut on the tie rod end so that there are only a few threads engaged.

Using a pickle fork, break the steering arm loose from the tie rod end, then remove the nut and tie rod end from the steering arm.

Remove the steering arm from the factory spindle and set aside.

### 4.2 SPINDLE REMOVAL

Loosen the castle nuts.

Using the pickle fork repeat the process for breaking loose the upper and lower ball joints.

**NOTE:** There will be tension on the coil spring and the vehicle may jump slightly. Take caution when doing this procedure and be sure the lower control arm is securely supported by the floor jack.

Once both upper and lower ball joints are broken loose from the spindle, carefully remove the upper ball joint castle nut and spindle from the control arm. Repeat the process for the lower ball joint and remove the factory spindle from the vehicle.



*Figure 3: Spindle removal*

## 5.0 INSTALLATION


[Back to Table of Contents](#)

### 5.1 SPINDLE INSTALLATION

Install the Speedtech spindle onto the lower ball joint.

**NOTE:** The brake caliper mount is towards the rear of the vehicle.

Thread on the lower ball joint castle nut. Repeat process for the upper ball joint and castle nut.

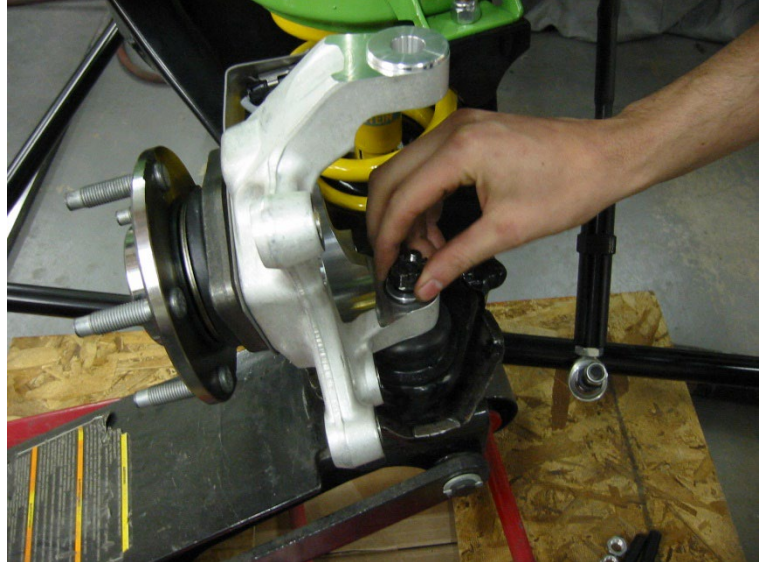


*Figure 4: Spindle installation*

### 5.2 SPINDLE TORQUE

Torque the lower ball joint to 41 ft/lbs. and replace the cotter pin.

Torque the upper ball joint to 31 ft/lbs. and replace the cotter pin.

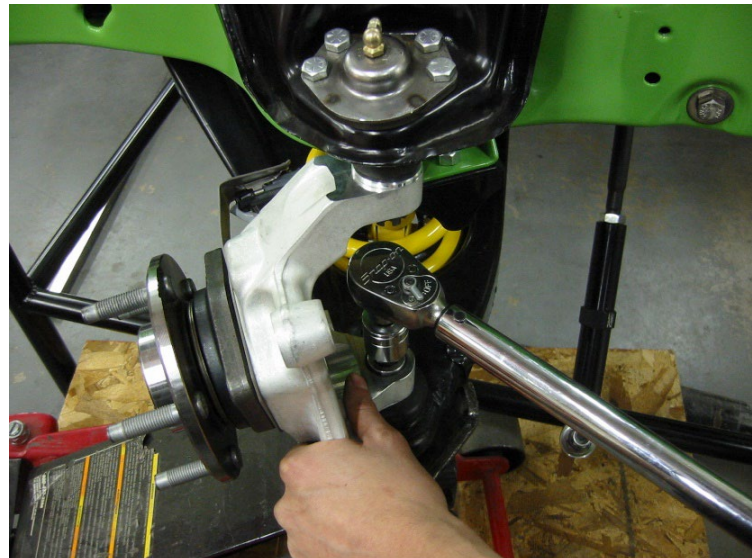

*Figure 5: Spindle torque*

## 6.0 FACTORY STEERING ARMS

[Back to Table of Contents](#)

**NOTE:** Due to length variances in factory applications, Speedtech does not supply the bolts for factory steering arms. You will need to source Grade 8 bolts of the proper length.

Bolt the factory steering arm onto the spindle. Note there are two different length bolts, the longer of the two is used in the rear. Torque to 45 ft/lbs.

Reinstall the tie rod end into the steering arm and torque to 35 ft/lbs. Install new cotter pin. Release tension from floor jack and move it out of the way. Repeat process for the other side.

**NOTE:** The Speedtech spindle requires a C5/6 based brake package to be installed. Speedtech recommends Baer or Wilwood brakes. Follow manufacturer's instructions for your specific brake system and be sure to properly bleed the brakes before driving the vehicle.

*Figure 6: Two images of factory steering arms*



## 7.0 SPEEDTECH PERFORMANCE BILLET STEERING ARMS

[Back to Table of Contents](#)

### 7.1 A and G BODY

Using the new bolts supplied in the kit, bolt the Speedtech steering arm onto the spindle.

**NOTE:** In the past, steering arms were machined to install only one way with the tie rod end closer to the center of the car. This has always been a good improvement to the steering and bump steer.

Speedtech's new machining modification allows you to install the steering arm on opposite sides with the tie rod end further from the center. This change in steering arm will help improve the Ackermann setting and should be used for auto cross and road race cars.



*Figure 7: Billet steering arms*

**NOTE:** This is a custom application and should not be used by all customers. It will require additional parts and set up including:

- Longer tie rod sleeves (These are available through Speedtech, but you must specify what length and what thread you require.)
- Alignment (After alignment, you may check and adjust the bump steer for the best performance. If you do not know how to do this, Speedtech suggests not doing this modification at home.)

**NOTE:** This is a custom set up application and should not be attempted by someone who is not familiar with this type of set up or is not able to measure and calculate optimum settings.

LONG TIE ROD PART NUMBERS:

- [220512](#) - '64-70 A- Body & '78-88 G-Body, 5/8" thread, 7.45" OAL
- [220513](#) - '71-72 A- Body 11/16" thread, 7.45" OAL
- [220514](#) - '70-81 F- Body 11/16" thread, 6" OAL

Speak to a representative if you do not already have the proper tie rods for this modification.

## 7.2 70-81 F-BODY

Install steering arm as shown with the tie rod end facing outside and toward the wheel.

Torque supplied bolts to 45 ft./lbs.

*Figure 8: Passenger side tie rod end and steering arm installment*



## 7.3 TIE RODS

A special length tie rod set is included with factory inner and outer tie rods.

*Figure 9: Tie rods*



## 8.0 MAINTENANCE

[Back to Table of Contents](#)

All aluminum has an endurance limit. Therefore, it is recommended to replace spindles every 15 years or 225,000 miles as a precautionary measure. Speedtech uses special jigs to install Corvette hubs into our spindles. Should your hubs ever need servicing, it is recommended you ship the spindles to us so that we can use the same process we used to originally build them. Servicing them other than through Speedtech Performance will waive any implied or expressed liability for the hub and/or spindle.

## 9.0 ALIGNMENT

[Back to Table to Contents](#)

Double-check all the fasteners. Set the car to the approximate ride height by adjusting the shock lower spring nuts. This should be done before aligning the car. When finished, take the vehicle to a competent professional alignment shop to have an alignment performed.

**NOTE:** Use alignment specifications below, not alignment shop pre-programmed factory Specifications.

The following specifications are only suggestions and may need additional changes to achieve the optimum settings for your driving style or situation.

### Daily Driving, Street Performance Specifications

Driver Side	Passenger Side
4 Degrees Positive Caster	4 ½ Degrees Positive Caster
0 To ½ Degree Negative Camber	0 To ½ Degree Negative Camber
3/ 32 Total Toe-In	3/ 32 Total Toe-In

### Aggressive Track Alignment Specifications

Driver Side	Passenger Side
5 ½ Degrees Positive Caster	6 Degrees Positive Caster
½ To 1 Degree Negative Camber	½ To 1 Degree Negative Camber
3/ 32 Total Toe-In	3/ 32 Total Toe-In

### Original Alignment Specifications

\*\*For reference purposes only. Do not use these specs.

Driver Side	Passenger Side
½ Degree Positive Caster	½ Degree Positive Caster
¼ To ½ Degree Negative Camber	¼ To ½ Degree Negative Camber
1/8 Total Toe-In	1/8 Total Toe-In

Figure 10: Alignment specifications

## 10.0 CONGRATULATIONS

[Back to Table of Contents](#)

Congratulations on completing your project! We know you will get many years of enjoyment from your project. Please join the group, [Team Speedtech](#), on Facebook. Team Speedtech is a community of customers, dealers, and factory employers that have a passion for pro touring muscle cars and are using Speedtech Performance products. You can ask questions and get advice from the group members and share your experience. Everyone enjoys seeing the videos and pictures during the progress of your project and Speedtech encourages you to share them!

Thank you for choosing Speedtech Performance and entrusting us with your spindle for your custom muscle car.

Speedtech Performance, LLC  
4160 S. River Rd.  
St George UT, 84770  
(435) 628-4300