

Speedtech PERFORMANCE

May 4, 2020

LS Engine Mount Adapters



Installation Instructions


The following instructions are intended for professional installers and are guidelines only. Speedtech Performance assumes NO responsibility for the installation of any of its products. All products must be installed by qualified professionals only

Thank you for purchasing your new Speedtech billet engine mount plate kit. Installing this product will require the removal of your engine. Take all necessary precautions whenever doing this type of work and use safe and sturdy jack stands to support the vehicle whenever it is off the ground. Be sure to take all other safety precautions required to do the job correctly.

Parts List

1. (1) Right side Adapter Plate
2. (1) Left side Adapter Plate
3. (4) M10x1.5x35 FLAT Socket Head
4. (6) M10x1.5x30 Socket Head
5. (6) 10mm Din Flat Washer
6. (6) 3/8 x 3/4 Plug Bolt
7. (6) 3/8 SAE Flat Washer

Note- Adapter Plates are labeled individually for Driver and Passenger side.

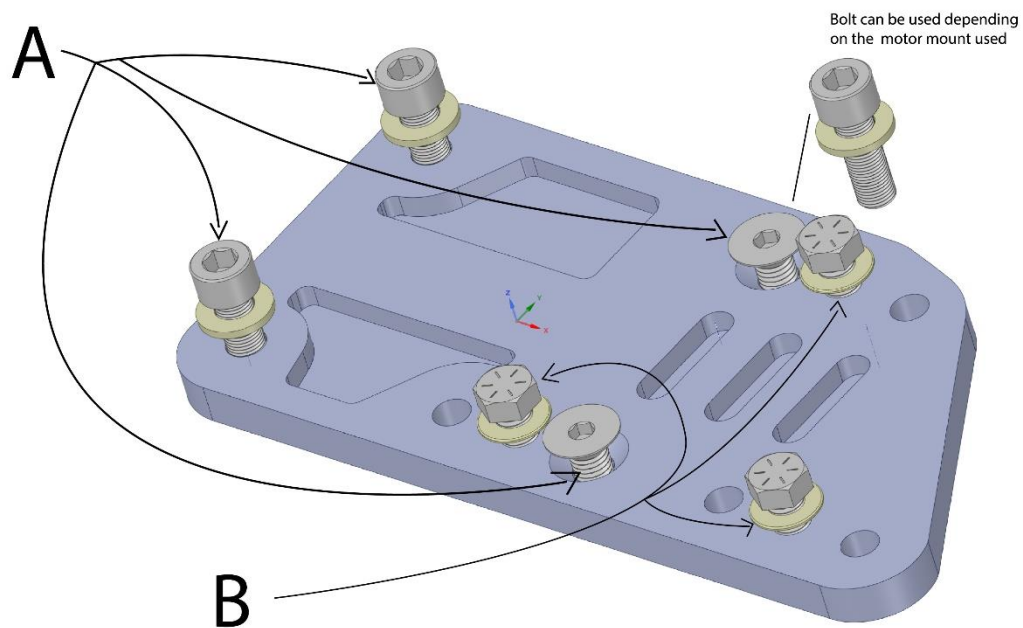

“A” Bolts- Will attach the adapter plate to the block. Torque M10 bolts through adapter plate into block to 37 ft lbs.

“B” Bolts- Will attach the motor mount (sold separately) to the adapter plate. Use BLUE Loctite and torque these bolts and nuts to 25 lbs. The remaining top bolt is threaded through the mount into the engine block and torqued to 37 lbs.

Speedtech Performance
4160 S. River Rd.
St. George, UT 84790
(435)-628-4300

