

# Instructional Guide

*Billet Aluminum Body Mounts  
71-76 B-Body*




***Speedtech***  
**PERFORMANCE**

CHASSIS - SUSPENSION - PRO TOURING - AUTOCROSS - DRAG RACING - CUSTOM BUILDS

435.628.4300 [SPEEDTECHPERFORMANCE.COM](http://SPEEDTECHPERFORMANCE.COM)    

4160 S. RIVER RD, ST. GEORGE, UT 84790

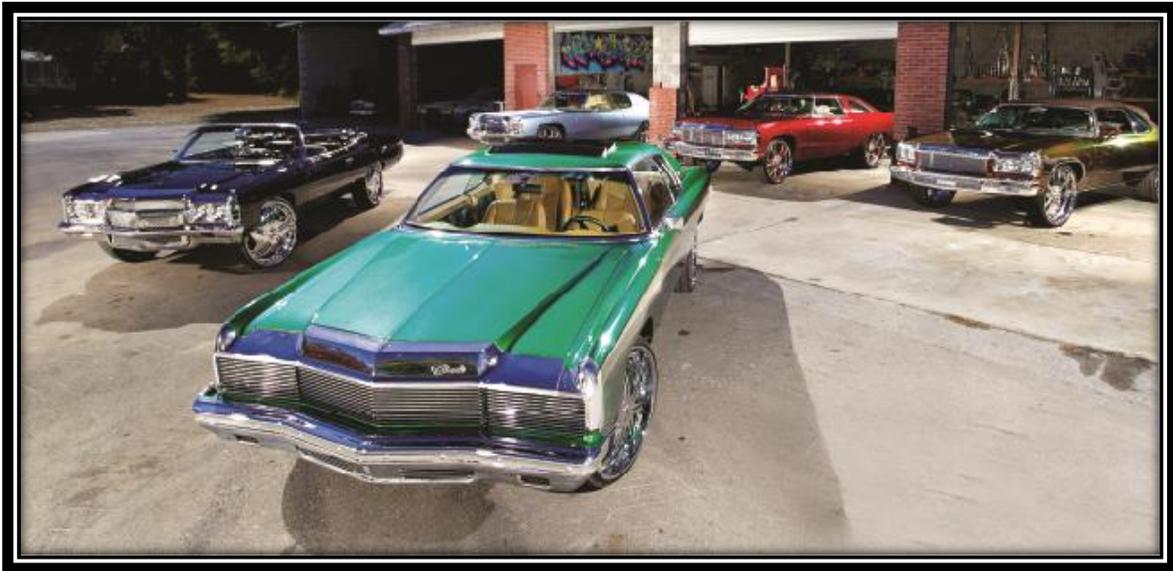

*Figure 1 1971-76 B-Body, Zaxh Randolph*

Congratulations on the purchase of your new Speedtech Performance Aluminum Body Mounts. Use only approved and appropriately rated jack and jack stands, be sure to take all safety precautions required to do the job safely and correctly. If you are unsure, seek the assistance of a highly qualified workshop to assist you.

Read and understand all instructions thoroughly before you begin. For the most part, assembly and set up of your new Aluminum Body Mounts can be done in a home garage with hand tools and basic equipment.

We enjoy seeing the progress our customers are making as they work through their builds so join the Team Speedtech group on Facebook and share your pictures and your story.

From everyone at Speedtech Performance we send you all best wishes for your project!

---

# Installation Guide

## TABLE OF CONTENTS

### 1. GENERAL INFORMATION

- 1.1 THIS GUIDE
- 1.2 OVERVIEW
- 1.3 TOOLS

### 2. CHECK IN PARTS AND HARDWARE

- 2.1 CHECKING IN THE ORDER
- 2.2 CHECK IN TABLES

### 3. GETTING STARTED/INSTALLATION

- 3.1 LEVELING AND SUPPORT
- 3.2 INSTALLATION
- 3.3 REPEAT
- 3.4 SQUARE/SHIM

### 4. FINISHING

- 4.1 TORQUE

### 5. CONGRATULATIONS

## 1.0 GENERAL INFORMATION

[Back to Table to Contents](#)

### 1.1 This Guide

Thank you for purchasing your new Speedtech Performance Aluminum Body Mounts. These instructions outline the Aluminum Body Mounts that will be installed with the Speedtech Performance ExtReme or a factory chassis.

### 1.2 Tools

Installation of the Speedtech Performance Aluminum Body Mounts can be done on the floor with simple hand tools.

Additional things to have before you start:

- Wrench
- Jack Stands
- Anti-Seize
- Post Lift (If possible)

## 2.0 CHECK IN PARTS AND HARDWARE

[Back to Table to Contents](#)

### 2.1 Checking in the Order


Best practice will be to check in your order as soon as possible after receiving the order. To check in the order we have provided tables, these can be used as check lists for your order.

### 2.2 Check in Tables


X	#	Description	Size
	14	Solid Body Mount – Hat	2 Groove
	14	Body Mount – Cup	2 Groove
	14	Body Mount Bolts	7/16 x 3 NC
	2	Nylock Nuts	7/16
	16	Washer – Flat	7/16
	16	Washer – Flat	5/8
	10	Washer – Lock	7/16

**Note:** There may be some extra hardware that was packaged that is not accounted for in the check list. The hardware kits are made to fit multiple products and the excess is from that process.

## Radiator Mounts

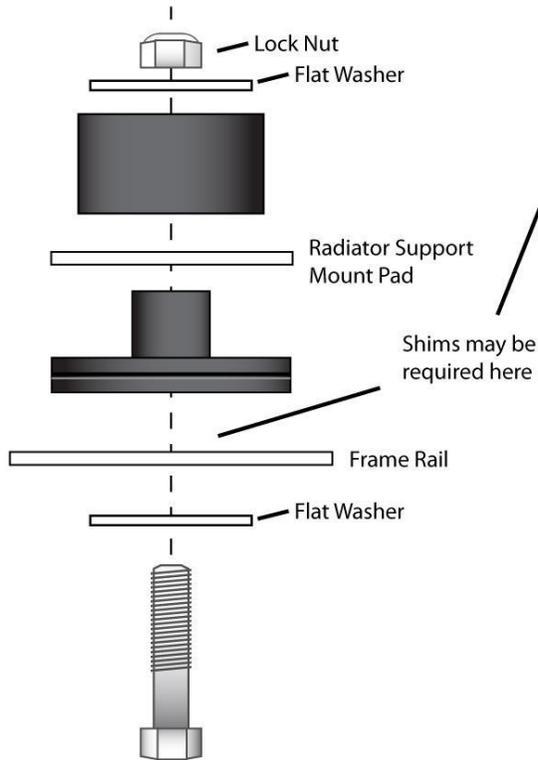


## All Other Mounts

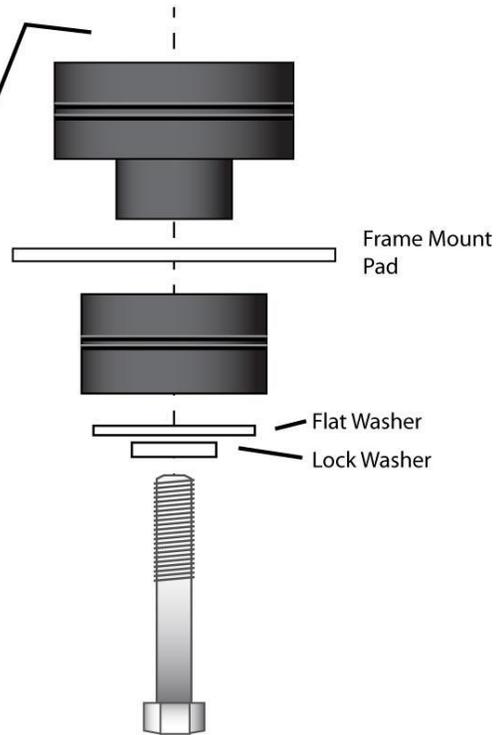

### 16 MOUNT LOCATIONS

- (12) TYPICAL MOUNT
- (2) CORE SUPPORT
- (2) RUBBER BUMPER

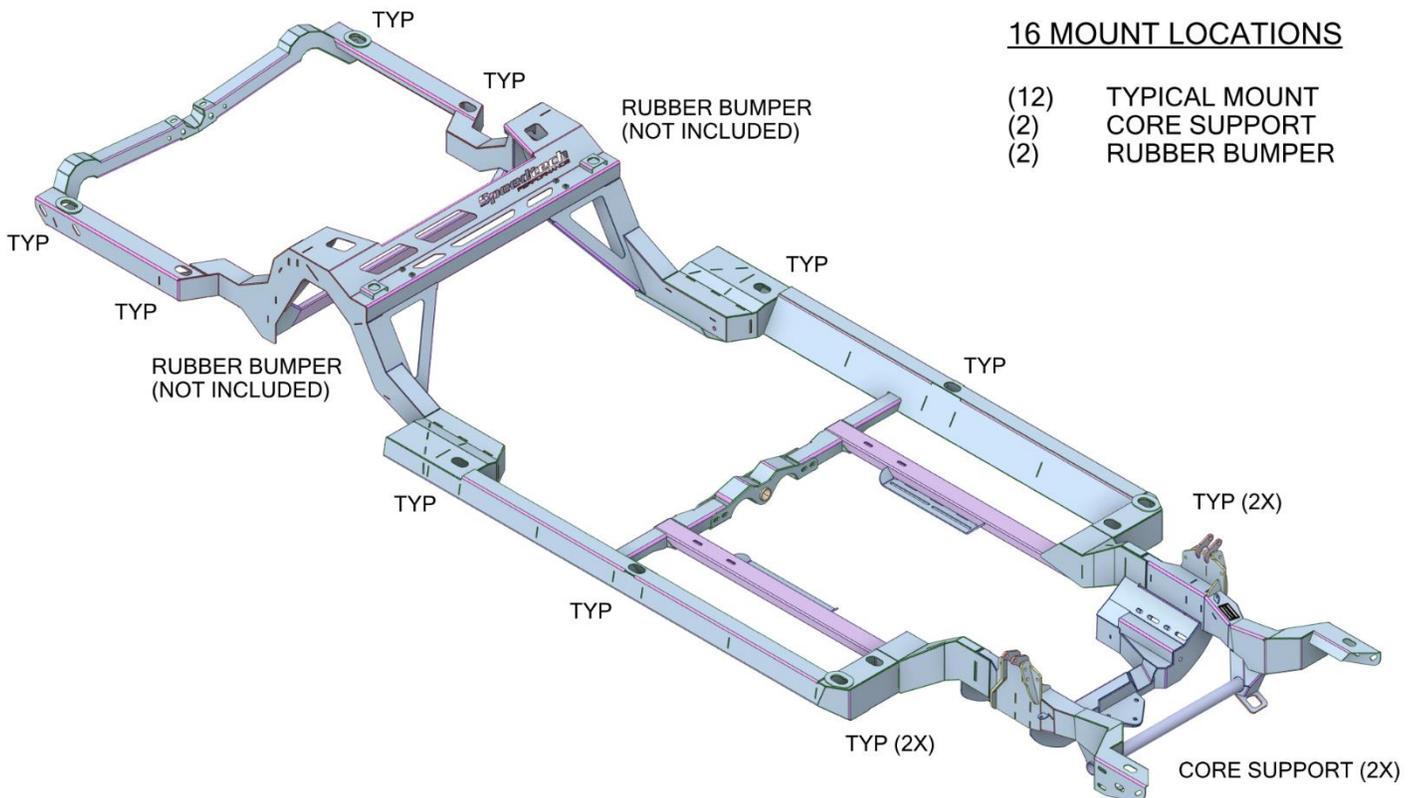

## 3.0 GETTING STARTED / INSTALLATION

[Back to Table to Contents](#)

### 3.1 LEVELING AND SUPPORT

The vehicle should be on a level surface before you start. Leave the vehicle on the ground and remove all body mount bolts and lower bushing halves. Some bolts may be rusty, you may need to apply penetrating fluid to remove them.

### 3.2 INSTALLATION

**NOTE:** The radiator mount is flipped around to go through the core support as opposed to the frame. Place a floor jack with a length of 2x4 or square tubing to spread the load under the body's rocker and gently raise the body on one side until there is enough room to remove and replace the bushings on that side. Coat the threads of your 7/16 X 3" bolts with anti-seize and loosely thread through the lower bushings and into the body with a flat washer and lock washer as shown in the diagram.

### 3.3 REPEAT

Repeat steps on the other side of the car.

### 3.4 SQUARE/SHIM

Square and Gap the body on the new mounts.

Ensure that the hood and fenders line up properly with the body.

Ensure that all body mounts have full contact with the body. Use shims (not included) to adjust as necessary.

## 4.0 FINISHING

[Back to Table to Contents](#)

### 4.1 TORQUE

As rubber mounts tend to compress and distort over time and all floor pans are slightly different, ensure that the hood and fenders line up properly with the body, and that all bushings fully contact the floor before torquing. Use additional shims (not included) to adjust as necessary. Cross measure the frame to ensure it is straight and square to the body. When the frame is squared in, **torque all bolts to 90 ft lbs.**

**NOTE: Recheck torque after approximately 100 miles of driving.**

## 5.0 Congratulations

[Back to Table to Contents](#)

Congratulations on completing your project, we know you will get many years of enjoyment from your project. Please join the group [Team Speedtech](#) on Facebook. Team Speedtech is a community of like-minded individuals using Speedtech Performance products. The Group's members include customers, our dealers and factory employees - each with a passion for Pro Touring muscle cars. You can ask questions and get advice from the group members as well as share your experience. Within the group we enjoy seeing the videos and pictures during the progress of your projects so post up. We also encourage you to share pictures and videos of your finished projects out on the road, at the show & shine, on track or however you get enjoyment from your ride, we want to see it!

Thank you for choosing Speedtech Performance! We know you have a choice, and we appreciate that you entrust us with your chassis and suspension needs for you custom muscle cars.

Speedtech Performance, LLC  
4160 S. River Rd.  
St George UT, 84770  
(435) 628-4300